



## Optional Accessories

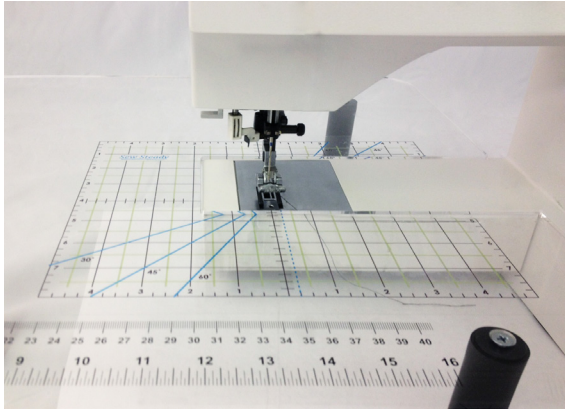


### Universal Table & Insert Grid

8" x 10" cling grid. Fits on underside of Table or cabinet Insert. Includes standard measurements and angles, as well as centering ruler with 5" on each side. *MSRP \$10*

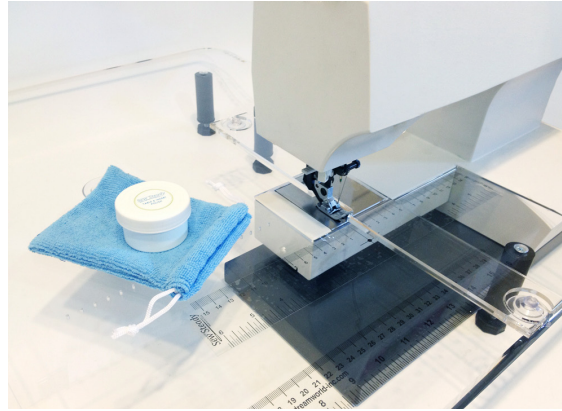

### Table Polish Kit

Silicone based polish helps fabric glide across Table or cabinet Insert. Includes cylinder of polish, applicator sponge, polishing mitt and instructions for application. *MSRP \$10*

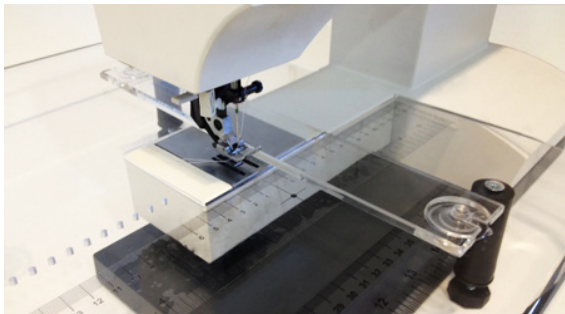


### Universal Sew Straight Guide

Acrylic guide for sewing straight seams. Attaches to any flat sewing surface with suction cups. Includes centering ruler to help line projects up with the needle on the sewing machine

#### Sizes:

11" Universal Sew Straight Guide: \$20.00  
15" Universal Sew Straight Guide: \$25.00

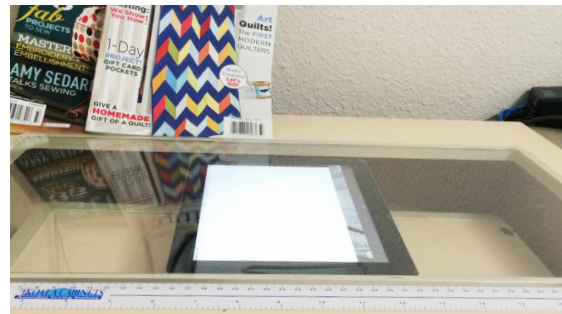


### Light Box - Blank Insert

Plain acrylic insert that allows a light to be placed under to turn your cabinet into a light box for tracing patterns and more.

#### Sizes:

Small, Medium, Large: Prices Vary

## Insert Installation Guide

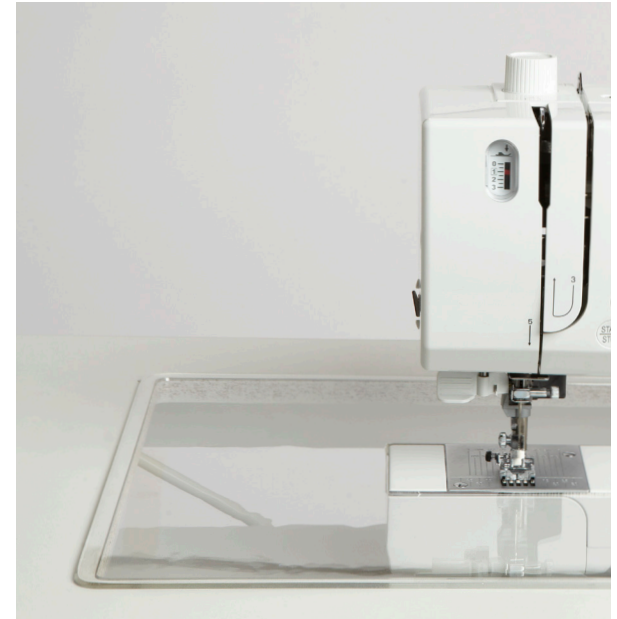

To view an insert installation video, visit

[www.arrowcabinets.com](http://www.arrowcabinets.com)

Video section > Installing Custom Insert

## How to Install the Insert

- 1 Remove any accessory trays surrounding sewing machine free arm.
- 2 Raise or lower cabinet lift so free arm (at needle) is level with top of cabinet. Insert will not fit properly if machine is too high (See examples below). Call cabinet manufacturer for instructions on lowering lift.

### Example of Incorrect Height Insert is raised up on the right side, resting on machine.



The machine is too high in the cabinet  
The lift needs to be lowered.

### Example of Correct Height & Fit Insert sits flush and level with needle & cabinet



- 3 Peel film from top and bottom of insert. Peel white backing off cling ruler, place on underside of insert. Ruler can be cut down with scissors to fit smaller inserts.

- 4 Place insert around machine and lay in

## Troubleshooting Fit issues

Issue	Possible Cause	Remedy
Not fitting around the free arm	Accessory tray is still attached	Remove accessory tray
Insert isn't sitting flush	Cabinet lift has not been lowered enough	Lower lift (see insert or instruction to left)
Acrylic comes up over sewing machine	Sewing machine has a downward slope or curve sewing surface to the right.	No remedy this is correct fit (see below)
Table or insert still not fitting correctly (issue not listed)		Please contact dealer where you purchased from.



### Example of Correct Fit (Sloped Machine) Insert sits flush and level with needle & cabinet

## ACRYLIC TABLE & INSERT CARE

**CLEANING:** USE ONLY 100% COTTON TOWEL TO CLEAN THE SURFACE OF THE ACRYLIC. USE A VERY SMALL AMOUNT OF SUDSY AMMONIA DILUTED WITH WATER TO CLEAN. TWO TESTED AND APPROVED CLEANING AGENTS ARE TURTLE WAX® PASTE AND GOO GONE® (NON-SPRAY). SIMILAR UNTESTED PRODUCTS MAY WORK, BUT USE AT YOUR OWN RISK.

**CAUTION:** DO NOT PLACE ANYTHING HOT ON ACRYLIC SURFACE. NEVER HAVE SEWING MACHINE ARM LOWER THAN CABINET INSERT.

**WARNING:** DO NOT USE HARSH SOLVENTS SUCH AS WINDEX, RUBBING ALCOHOL, PAINT THINNER, LACQUER THINNER, ACETONE, TURPENTINE, OR ANY PETROLEUM BASED SUBSTANCE AS THEY CAN CAUSE THE ACRYLIC TO WEAKEN AND CRACK. IF HARSH SOLVENTS ARE USED ON TABLE THE WARRANTY IS VOID.

## ONE YEAR LIMITED WARRANTY

ARROW CABINETS WARRANTS THIS PRODUCT, TO THE ORIGINAL PURCHASER, FOR ONE YEAR FROM PURCHASE DATE TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP. THIS DOES NOT INCLUDE CRACKS, SCRATCHES OR DENTS DUE TO DROPPING, BUMPING, BANGING, STEPPING ON, OR NORMAL USE. IF HARSH NON-APPROVED CLEANING AGENTS ARE USED ON ACRYLIC WARRANTY IS VOID. REMOVING OR OVER TIGHTENING SCREWS AND NUTS FROM TABLE TOP VOIDS WARRANTY. DEFECTIVE PRODUCT MAY BE SENT (FREIGHT PREPAID) TO SERVICE DEPARTMENT, ARROW CABINETS, P.O. BOX 10585, EUGENE, OR 97440 FOR EVALUATION OF FREE REPAIR OR REPLACEMENT AT OUR OPTION. YOUR REMEDY DOES NOT INCLUDE: COST OF INCONVENIENCE, DAMAGE DUE TO PRODUCT FAILURE, TRANSPORTATION DAMAGES, MISUSE, ABUSE, ACCIDENT OR THE LIKE, OR COMMERCIAL USE. IN NO EVENT SHALL ARROW CABINETS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, OR ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

To view an insert installation video, visit

[www.arrowcabinets.com](http://www.arrowcabinets.com)

Video section > Installing Custom Insert

Questions? Call Arrow Cabinets

1-800-533-7347